

# **USER MANUAL**

# RG2 Industrial Robot Gripper

# For the Universal Robots

Document version 1.9.2 OnRobot URCap version 1.9.0. January 2019

# Content

1	Pref	ace	•••••••••••••••••••••••••••••••••••••••	5
	1.1	Targ	et Audience	5
	1.2	Intended Use		
	1.3	Impo	ortant Safety Notice	5
	1.4	War	ning Symbols	6
	1.5	Турс	ographic Conventions	7
2	Gett	ing S	tarted	.8
	2.1	Scop	e of Delivery	.8
	2.2	Mou	inting	.8
	2.3	Mec	hanical Dimensions	.9
	2.4	Load	Capacity	10
	2.5	Fing	ertips	11
	2.6	Grip	per Work Range	12
	2.6.1	. Fi	nger Thickness	12
	2.6.2	2	Gripping Speed	13
	2.7	Cabl	e Connections	13
	2.7.2	1	Tool Connections	13
	2.7.2	2	Power Supply	14
	2.8	UR C	Compatibility	14
	2.9	URC	ap Plugin Installation	15
	2.10	URC	ap Plugin Setup	15
	2.10	.1	Mounting Setup	15
	2.10	.2	Settings	19
	2.10	.3	About Screen	20
3	Usin	g the	e URCap Plugin	22
	3.1	OnR	obot Feedback Variables	22
	3.1.2	1	Single RG2	22
	3.1.2	2	Dual RG2	22
	3.2	OnR	obot URCap Commands	22
	3.3	RG2	Command	22
	3.3.2	1	Width and Force	23
	3.3.2	2	Payload	24
	3.3.3	3	Depth Compensation	25
	3.3.4	1	Feedback and Teaching Buttons	25

	3.3.	5	Dual Gripper	27
	3.4	RG2	2 TCP command	28
	3.5	Scri	pt Function	28
4	List	of Ac	cronyms	29
5	Арр	endi	х	30
	5.1	Tecl	hnical Specifications	30
	5.2	Soft	ware Uninstallation	30
	5.3	Dec	larations and Certificates	31
	5.3.	1	CE/EU Declaration of Incorporation (original)	31
	5.4	Edit	ions	32

The information contained herein is property of OnRobot A/S and shall not be reproduced in whole or in part without prior written approval of OnRobot A/S. The information herein is subject to change without notice and should not be construed as a commitment by OnRobot A/S. This manual is periodically reviewed and revised.

OnRobot A/S assumes no responsibility for any errors or omissions in this document.

Copyright © 2015–2019 by OnRobot A/S.

The OnRobot A/S logo is trademark of OnRobot A/S.

# 1 Preface

#### 1.1 Target Audience

This document is intended for integrators who design and install complete robot applications. Personnel working with the gripper are expected to have the following expertise:

Basic knowledge of mechanical systems

Basic knowledge of electronic and electrical systems

Basic knowledge of the robot system

#### 1.2 Intended Use

The gripper is designed for grabbing objects, installed on the end effector of a robot, typically used in pick and place applications. OnRobot is not liable for any damage or injury resulting from misuse.

Misuse includes, but is not limited to:

- Use in potentially explosive environments
- Use in medical and life critical applications
- Use before performing a risk assessment

#### 1.3 Important Safety Notice

The gripper is *partly completed machinery* and a risk assessment is required for each application the gripper is a part of. It is important that all safety instructions herein are followed. The safety instructions are limited to the gripper only and do not cover the safety precautions of a complete application.

Below is listed some potential dangerous situations, that the integrator as a minimum must take to consideration. Please note that there can be other dangerous situations depending on the specific situation.

- Entrapment of limbs between the Grippers finger arms
- Penetration of skin by sharp edges and sharp points on the grabbed object
- Consequences due to incorrect mounting of the Gripper
- Objects falling out of the Gripper, e.g. due to incorrect gripping force or to high acceleration from a robot

The complete application must be designed and installed, in accordance with the safety requirements specified in the standards and regulations of the country where the application is installed.

### 1.4 Warning Symbols



#### DANGER:

This indicates a very dangerous situation which, if not avoided, could result in injury or death.



#### WARNING:

This indicates a potentially hazardous electrical situation which, if not avoided, could result in injury or damage to the equipment.



#### WARNING:

This indicates a potentially hazardous situation which, if not avoided, could result in injury or major damage to the equipment.



#### CAUTION:

This indicates a situation which, if not avoided, could result in damage to the equipment.



#### NOTE:

This indicates additional information such as tips or recommendations.

### 1.5 Typographic Conventions

The following typographic conventions are used in this document.

Table 1: Conventions			
Courier Text	File paths and file names, code, user input and computer output.		
Italicized text	Citations and marking image callouts in text.		
Bold text	UI elements, including text appearing on buttons and menu options.		
Bold, blue text	External links, or internal cross-references.		
<angle brackets=""></angle>	Variable names that must be substituted by real values or strings.		
1. Numbered lists	Steps of a procedure.		
A. Alphabetical lists	Image callout descriptions.		

#### Table 1: Conventions

# 2 Getting Started

#### 2.1 Scope of Delivery

In the Universal Robots OnRobot RG2 Gripper Kit everything required to connect the OnRobot gripper to your UR robot is provided.

- OnRobot RG2 Industrial Robot Gripper
- OnRobot RG2 Single Bracket
- OnRobot RG2 Fingertips
- OnRobot USB drive
- 4 mm Hex Allen key
- 2.5 mm Hex Allen key
- 2 mm Hex Allen key
- plastic bag, containing:
  - M6x8 screws (4 pcs)
  - M4x8 screws (6 pcs)

#### 2.2 Mounting



To mount the gripper, follow this process:

- 1. Fasten the Gripper bracket to the Robot by four M6x8 Screws. Use 7 Nm tightening torque. Use the 4 mm Hex Allen key.
- 2. Fasten the Gripper to the adapter by six M4x8 screws. Use 2 Nm tightening torque. Use the 2.5 mm Hex Allen key.

Use only the screws provided with the gripper. Longer screws could damage the gripper or the robot.

The design of the standard Gripper bracket means that the angle of the Gripper can be adjusted from 0° to 180° in steps of 30°.

#### 2.3 Mechanical Dimensions



The dimensions are in millimeters (the cable may differ from above drawing).

#### 2.4 Load Capacity

Be aware that when grapping an object, some of the parameters below are not directly aplicative, but can be used to calculate the load on the Gripper.



Parameter	Static	Unit
Fy	362	[N]
Mx	7,55	[Nm]
Му	4,1	[Nm]
Mz	6,92	[Nm]
Mx <sub>1</sub>	22	[Nm]
My <sub>1</sub>	11	[Nm]
Mz <sub>1</sub>	22	[Nm]

The parameters in the fingertips are calculated at the shown position and will change in relation to the finger positions.

#### 2.5 Fingertips

The standard fingertips can be used for many different workpieces. If custom fingertips are required, they can be made to fit the Gripper fingers.



Dimensions of the Grippers aluminum fingers, in millimeters.



#### 2.6 Gripper Work Range

The work range is measured between the aluminum fingers. The Gripper can be used for both internal and external grip, e.g. by rotating the fingertips. Make sure that the offset is adjusted before entering values into the Gripper settings.

See the figure below, for external grip, and internal grip with rotated fingertips.



See the figure below, for the gripper work range.



#### 2.6.1 Finger Thickness

The finger thickness is used to specify the distance from the inside of the RG2 aluminum fingertip to the reference point on the attached fingertip. When removing or changing the fingertips, the thickness of the fingertips have to be adjusted in the RG2' configurations.

For more information, see section **Settings**.

#### 2.6.2 Gripping Speed

Speed table illustrating the difference in speed relative to the Gripper finger position.



#### 2.7 Cable Connections

To connect the gripper, follow this process:

1. Connect the 8 pin M8 cable of the gripper to the Tool I/O connector on the robot arm.

#### 2.7.1 Tool Connections

The Gripper cable is intended to fit the tool connector OnRobots from Universal Robots. The connections are described below. The output tool connector on the Gripper shares the same connections as the input cable described below.

Cable RKMV 8-354



Pin	Wire	UR Tool	UR I/O V3
1	White	AI2	Tool analog input 2
2	Brown	AI3	Tool analog input 3
3	Green	DI9	Tool input 1
4	Yellow	DI8	Tool input 0
5	Gray	Power	24V DC
6	Pink	DO9	Tool output 1
7	Blue	DO8	Tool output 0

8	Red	GND	0V DC

- 1. If the Gripper is used in applications where it is not connected to a UR robot.
  - i. Make sure the connections resemble the analog input, digital in and outputs and the power connections.
  - ii. Make sure you use a RG2 Gripper programming script that is adapted to fit your specific application. For more information, please contact your supplier.
- 2. Do not operate the Gripper in a wet environment.

#### 2.7.2 Power Supply

CAUTION:

The Gripper can operate at both 12V and 24V. At 12V the forces, speed and some of the function tolerances described in this manual do not apply. It is recommended to use 24V.

### 2.8 UR Compatibility

If the UR version is 3.0 <= and >= 3.3. It is recommended to upgrade the robot to the newest available UR software and install the URCap plugin that is installed in this manual. If the robot is < 3.0 the OnRobot USB pen will detect it and install the templates needed for your robot version. In such case please see the User Manual version 1.44 placed on the USB in the folder "\ON\CLASSIC\Technical support".

Compatibility overview:

RG2 Robot program	RG2 firmware < 1.5	RG2 firmware >= 1.5	Robot SW < 1.6	Robot SW < 3.3	Robot SW >= 3.3
Retro URP files	1	1	$\checkmark$	1	$\checkmark$
Classic URP files	1	1	X	~	$\checkmark$
Cap plugin	1	1	X	1	$\checkmark$

Fully compatible

V Upgrade needs to be done X Not compatible

If the firmware version is too low, the URCap will automatically guide you to update the firmware.

#### 2.9 URCap Plugin Installation

To install the OnRobot URCap plugin, follow this process:

1. Insert the OnRobot USB drive in the USB slot on the right side of the Teach Pendant. A progress bar appears, indicating the upload is in progress.

- 2. Wait for the Robot to reboot.
- 3. Initialize the robot.

Continue with URCap Plugin Setup.

#### 2.10 URCap Plugin Setup

#### 2.10.1 Mounting Setup

🜒 File		12:59:54	3438 🕜
Program Installation	Move I/O Log		
TCP Configuration	Mounting Settings	🗹 Enable RG2 🛛 🌒	nobot 🕕
Mounting	Bracket		
I/O Setup	Single 🗸		
Safety	Single Precision		
Variables			
MODBUS client	X 0.0 mm		
Features	Y 0.0 mm		
Base Tool	Z 0.0 mm		
Conveyor Tracking	RX 0.0000		
EtherNet/IP	BY 0.0000		
PROFINET		*	
RG2 Configuration	R2 0.0000		
Default Program			
肩 Load/Save	Adjust TCP at Width: 101 mm	(0)	

#### 2.10.1.1 Bracket

Select the bracket that is used for mounting the RG2(s) on the robot. The options are: "Single", "Precision" or "Dual". The "Dual" bracket is used in case of a dual RG2 setup. The "Precision" bracket offers an accurate remount of the RG2 with the rotation options of 90° steps. With the "Single" and "Dual" brackets, the RG2(s) can be rotated at 30° steps.

	13:03:	42 3438 🕜
Move I/O Log		
Mounting Settings	🗹 Enable RG	2 🔮 💽 robot
Single		
тср:		
$\textcircled{O} T^{TCP}_{flange} \textcircled{O} T^{TCP}_{RG2}$		
X 0.0 mm		
Y 0.0 mm		
Z 0.0 mm		
PX 0.0000		
KX 0.0000		
RY 0.0000		
RZ 0.0000		
	a b a	1
Adjust TCP at Width: 101		
	Move         I/O         Log           Mounting         Settings           Bracket           Single         ▼           TCP:         ▼           𝔅         T <sup>TCP</sup> <sub>RG2</sub> 𝔅         0.0           𝔅         0.0           𝔅         0.0           𝔅         0.00           RX         0.0000           RZ         0.0000           Adjust TCP at Width:         101	13:03:         Move 1/0 Log         Mounting Settings         Bracket         Single ▼         TCP:         ♥ TfIcnge ● TfRC2         X       0.0         Y       0.0         RX       0.0000         RY       0.0000         Adjust TCP at Width: 101       mm

#### 2.10.1.2 Rotation Buttons

Button marked 'b' will rotate the bracket 90° counter clockwise around the z-axis of the tool flange

Buttons marked 'a' will rotate the selected RG2 +/- the step size (30°/90° depending on bracket).

#### 2.10.1.3 TCP Radio Buttons and Values

The radio button will change, if the values represent the transformation from the tool flange to the actual TCP  $T_{flange}^{TCP}$ , or the transformation for the point in between the fingers of the RG2 to the actual TCP  $T_{RG2}^{TCP}$ . The default values of  $T_{RG2}^{TCP}$  will always be [0,0,0,0,0,0] while  $T_{flange}^{TCP}$  is dependent on bracket and RG2 rotation.





The example above illustrates the difference between how  $T_{RG2}^{TCP}$  and  $T_{flange}^{TCP}$  is calculated.

The fields [X,Y,Z,RX,RY,RZ], both serve as input and output. When  $T_{flange}^{TCP}$  is selected, the values will be affected by pressing the Rotation buttons and entering a new TCP width. The values of [X,Y,Z,RX,RY,RZ] can always be overwritten. If a reset is wanted, the TCP radio button should be set to  $T_{RG2}^{TCP}$  and [0,0,0,0,0,0] should be filled in in the rotation vectors [X,Y,Z,RX,RY,RZ].





The example shown above, illustrates what to take into account, if you extend the RG2 fingers by 50 mm.

#### 2.10.1.4 TCP Width

It defines the reference width for the point in between the fingers. A low width will increase the displacement from the bracket to the point in between the fingers, while a higher width will decrease the displacement.

#### 2.10.1.5 RG2 Dual Setup

If the dual bracket is selected, the radio buttons "Master" and "Slave" will appear. They control the rotation of the two RG2 Grippers. The Master/Slave radio buttons will select if it is the Master or the Slave RG2 that should perform the action.



#### 2.10.2 Settings



#### 2.10.2.1 Fingertip Offset

The fingertip offset is used to specify the distance from the inside of the RG2 aluminum fingertip to the reference point on the attached fingertip.

Fingertip offset: 20.0 mm	Fingertip offset: 20.0 mm
20.0 mm	-20.0 mm

The examples above, shows how the URCap uses the specified offset.

#### 2.10.2.2 TCP Settings

The option to make the URCap plugin set the TCP [X,Y,Z,RX,RY,RZ] rotation vectors at program start and/or every time the RG2 performs an action, is available at the top right corner.

If the TCP is controlled manually and the "Depth Compensation" is not used, it is recommended to disable both check marks. If the TCP is changed dynamically (during a program) and the "Depth Compensation" is used, it is recommended to enable "set TCP at RG2 action".

#### 2.10.2.3 Disable Single Step

If "Disable single step" is selected, the robot program can be started fast and is not dependent on the number of RG2 commands, but in this case, it is not possible to single step the RG2 commands. If it is deselected, the case is the opposite. This option is also located in the top right corner.

#### 2.10.2.4 Depth Compensation Settings

All the "Depth compensation" settings are used for controlling how the Depth compensation should behave, when a RG2 command is set to enable Depth compensation.

"Soft stop" will reduce all robot joint accelerations at the end of the compensation and minimize the integrated compensation error but will make a small increase of the command execution time.

If the "Lag warning" is enabled the robot will give a warning if the robot movement lags the RG2 above the specified threshold. The reason for lag can be a low value of the speed slider, low gain, high lookahead time, strict safety settings, robot kinematic, fast RG2 movements (high force) and full RG2 stroke.

The "Lag threshold" is the threshold that will trigger a warning message if the lag warning is enabled.

The "Gain" is the gain used for the **servoj** function used in the depth compensation. See the UR script manual.

The "Lookahead time" is the lookahead time used for the **servoj** function used in the depth compensation. See the UR script manual.



#### 2.10.3 About Screen

#### **Getting Started**

When pressing the Onrobot logo in the top right corner, the above window will appear. From this window it is possible to update the RG2 firmware and to see which version of the URCap is installed.

# 3 Using the URCap Plugin

#### 3.1 OnRobot Feedback Variables

#### 3.1.1 Single RG2

Feedback Variable	Unit	Description
grip_detected	True/False	True if Gripper has detected a work piece
lost_grip	True/False	True if Gripper has dropped a work piece
measure_width	[mm]	Width between the fingers of the Gripper

#### 3.1.2 Dual RG2

Feedback Variable	Unit	Description
master_grip_detected	True/False	True if master has detected a work piece
master_lost_grip	True/False	True if master has dropped a work piece
master_measure_width	[mm]	Width between the fingers of the master
slave_grip_detected	True/False	True if slave has detected a work piece
slave_lost_grip	True/False	True if slave has dropped a work piece
slave measure width	[mm]	Width between the fingers of the slave

#### 3.2 OnRobot URCap Commands

#### 3.3 RG2 Command

To add a RG2 command, go to the **Program** tab select **Structure** and then the **URCaps** tab. Press the **RG2** button to add the command.

#### Using the URCap Plugin

🕘 File		10:29:03 <b>3438</b>
Program Installation	Move I/O Log	
-unnamed>	Command Graphics Structure Variables	
Robot Program RG2_master(0)	Program Structure Editor	
	Set placement of node After selected 💌	
	Basic Advanced Wizards URCaps	
	RG2	TCP RG2
	Edit	
	A Move Copy Paste	e Suppress
<b>२ ♦ ◄▶</b>	Move Cut Delet	e
Simulation Real Robot	↓ ▶ ▶ ■ Speed	ቀ Previous 🛛 Next 🜩

#### 3.3.1 Width and Force

<u> R</u> 🔮 File		13:33:54 <b>3438</b> 🕐
Program Installation	Move I/O Log	
<pre>unnamed&gt;</pre>	Command Graphics Structure Variables	•
▼ Robot Program — RG2(80)	RG2	Onrobot
	Width 80 mm	
	Force 40 N	
	Set Payload: 0.0 kg     Depth Compensation     Perform action now	Width 80.0 mm
♀ ♠ ♪ ◄>	Fing	ertip offset: 4.0 mm
Simulation Real Robot	♦ ► ► ■ Speed □ 100%	Previous

"Width" is the target width that the RG2 will try to reach. If the specified force is achieved, the RG2 will stop at a width that differs from the target width.

"Force" is the target force that the RG2 will try to achieve. If the target width is reached before the target force, the RG2 will stop moving and the target force may not be achieved at the anticipated width.

#### 3.3.2 Payload

Force 40 N	
<ul> <li>✓ Set Payload: 0.0 kg</li> <li>✓ Depth Compensation</li> </ul>	Width 80.0 mm
Perform action now	Open Close

When the "Set Payload" calculation is selected, the object weight must be entered in the Payload field. The URCap plugin will then perform the calculation of the resulting payload mass (sum of bracket, RG2(s) and object). The center of mass for the object is assumed to be in the TCP. The object for the active Gripper is only taken into the calculations if an object is grabbed.

The math behind the calculations:

$$M = \sum_{i=1}^{n} m_i$$
$$R = \frac{1}{M} \sum_{i=1}^{n} m_i r_i$$

n: number of present components

i: bracket, RG2\_master, RG2\_slave, master\_object, slave\_object

m: mass for each component

**r**: center of mass vector for each component

M: resulting mass send to UR controller (payload)

**R**: resulting center of mass vector (CX=Rx, CY=Ry, CZ=Rz)

The above formulas correlate with the TCP configuration setup, which is shown below for reference. To make it simple, when the "Set Payload" is selected, it is only necessary to take the weight of the object handled into account.

#### Using the URCap Plugin

<u> I</u> IIe	10:25:26 <b>3438</b> (	7
Program Installation	Move I/O Log	
TCP Configuration	Setup for the Tool Center Point	
Mounting	Available TCPs:	
I/O Setup	TCP Set as default	
🛜 Safety	X 0.0 mm	
Variables	Y 0.0 mm Position	
MODBUS client	Z 0.0 mm <b>? Orientation</b>	
Features	RX 0.0000	
Base Tool	RY 0.0000 New	
Conveyor Tracking	RZ 0.0000 Remove	
EtherNet/IP PROFINET	Payload: 1.40 kg Z	
RG2 Configuration		
Default Program		
肩 Load/Save	CZ 0.0 mm	
·		

Two examples of what the URCap will calculate in the case the RG2 will pick a workpiece with the mass of 0.5Kg

Single mount bracket:

Robot payload = 0.09kg(bracket) + 0.65kg(RG2) + 0.5kg (work piece) = 1.24kg

Dual mount bracket:

Robot payload = 0.18kg (dual bracket) + 0.65kg (RG2 master) + 0.65kg(RG2 slave) + 0.5kg(work piece) = 1.98Kg

#### 3.3.3 Depth Compensation

When "Depth Compensation" is enabled, the robot arm will try to make a movement that compensates for the circular movement of the finger arms. There will be a small lag between the RG2 and robot arm movement. This lag will be dependent on the settings set in the installation, see **Depth Compensation Settings**. The compensation is done along the z-axis, so any manual change that will change the orientation of the z-axis will affect the compensation.

#### 3.3.4 Feedback and Teaching Buttons

#### 3.3.4.1 Gripping No Workpiece

<u> I</u> III III		12:37:24	cccc 🕜
Program Installation	Move I/O Log		
🔲 <unnamed></unnamed>	Command Graphics Structure Va	riables	
♥ Robot Program ← RG2(40)	RG2 Width 40 mm Force 40 N		robot
Simulation	Set Payload:     Okg     Depth Compensation     Perform action now	Width 40.4 mm Open Close Save actual width Fingertip offset: 4.6 mm	
🔕 Real Robot 📃	Speed 100%	Previous	Next 🌳

The "Open" and "Close" buttons are "hold to run" buttons, that will open and close the (selected) RG2.

The illustration above shows how the width text will give feedback about the actual width and if a work piece is grabbed and "Save actual width", is pressed the current width is set at the command.

#### 3.3.4.2 Gripping Workpiece Internally

🥂 🔮 File			12:36:25	cccc 🕜
Program Installation	Move I/O Log			
同 <unnamed></unnamed>	Command Graphics Structu	ıre Variables		
Robot Program RG2(74)	RG2			o 🕜 robot
	Width 74 mm	_		
	Force 40 N		0	
				,
			0	$\sim$
	🖌 Set Payload: 0kg	Width	71.3 mm	
	Depth Compensation	Open	Close	•
	Perform action now		Save grasp	
♀ ♠ ♪ ◄►		Fingertip offs	set: -4.6 mm	
Simulation Real Robot	Speed	√100%	🕈 Previous	s Next 🔿

The illustration above shows how the width text will give feedback about the actual width and a work piece is grabbed internally. When "Save grasp", is pressed the current width +3mm is set at the command.

#### 3.3.4.3 Gripping Workpiece Externally

🥂 🜒 File		12:35:07	cccc 🕜
Program Installation	Move I/O Log		
🔲 <unnamed></unnamed>	Command Graphics Structure Var	iables	
▼ Robot Program ← RG2(6)	RG2 Width 6 mm Force 40 N		o Grobot
	Set Payload: 0kg Depth Compensation Perform action now	Width 9.2 mm Open Close Save grasp Fingertip offset: 4.6 mm	
Simulation Real Robot	【 ▶ ▶ ■ Speed	🔶 Previous	6 Next 🔷

The illustration above shows how the width text will give feedback about the actual width and a work piece is grabbed externally. When "Save grasp", is pressed the current width -3mm is set at the command.

#### 3.3.5 Dual Gripper

🖉 File		10:29:17 3438 🕜
Program Installation	Move I/O Log	
同 <unnamed></unnamed>	Command Graphics Structure Variables	]
▼ Robot Program	RG2	Orobot
	Width 0 mm	
	Force 40 N	
	Master	
	Slave	
	🖌 Set Payload: 0.0 kg	Width 110.0 mm
	Depth Compensation	Open Close
<	Perform action now Finge	rtip offset: 0.0 mm
Simulation Real Robot	♦ ► ► Speed □ 100%	< Previous Next 🜩

The Master/Slave buttons, selects if it is the master or slave Gripper, that should perform the action.

#### 3.4 RG2 TCP command



The RG2 TCP command can be inserted to set the current TCP for the robot. The view and the controls are similar to the Mounting setup screen. The "TCP radio buttons & values" and "TCP width" is identical to the settings from the Installation, except that they only affect the single command and not the installation.

For explanation, see **TCP Radio Buttons and Values** and **TCP Width** (if dual Grippers are installed, see **RG2 Dual Setup** and **Dual Gripper**).

#### 3.5 Script Function

When the OnRobot URCap is enabled, there will be a defined RG2 script function:

**RG2**(target\_width=110, target\_force=40, payload=0.0, set\_payload=False, depth\_compensation=False, slave=False)

All the input arguments are the same as the ones used by the RG2 command. The script function is useful for parameterized programming. For example, a relative movement for quickly releasing a workpiece can be done as follows:

**RG2**(measure\_width+5, 40)

That will open the Gripper 5mm with the target force set to 40N.

If a soft/compliant work piece needs to be marked with a certain depth(2mm) it could be done with:

**RG2**(target\_width=0, target\_force=3, depth\_compensation=True)

RG2(target\_width=measure\_width-2, target\_force=40, depth\_compensation=True)

# 4 List of Acronyms

Acronym	Expansion
I/O	Input/Output
ТСР	Tool Center Point
UR	Universal Robots
URCap	Universal Robots Capabilities
USB	Universal Serial Bus

# 5 Appendix

#### 5.1 Technical Specifications

Technical data	Min	Typical	Max	Units
IP Class		54		
Total stroke (adjustable)	0	-	110	[mm]
Finger position resolution	-	0,1	-	[mm]
Repetition accuracy	-	0,1	0,2	[mm]
Reversing backlash	0,2	0,4	0,6	[mm]
Gripping force (adjustable)	3	-	40	[N]
Gripping force accuracy	±0,05	±1	±2	[N]
Gripping speed*	55	110	184	[mm/s]
Gripping time**	0,04	0,07	0,11	[s]
Operating voltage***	10	24	26	[V DC]
Power consumption	1,9	-	14,4	[W]
Maximum Current	25	-	600	[mA]
Ambient operating temperature	5	-	50	[°C]
Storage temperature	0	-	60	[°C]
Product weight	-	0,65	-	[kg]

\* see speed table

\*\* based on 8mm total movement between fingers, see speed table \*\*\*At 12V the Gripper runs at approximately half the normal speed

#### 5.2 Software Uninstallation

To uninstall the URCap plugin, follow this process:

- 1. Go to the Welcome screen of the PolyScope.
- 2. Click Setup Robot.
- 3. Click on URCaps Setup and locate the RG OnRobot in the list of active URCaps.
- 4. Click on the sign at the bottom to uninstall it.
- 5. Restart the robot.

#### Appendix

#### 5.3 Declarations and Certificates

#### 5.3.1 CE/EU Declaration of Incorporation (original)

According to European Machinery Directive 2006/42/EC annex II 1.B.

The manufacturer:

OnRobot A/S Teglvaerksvej 47H 5220 Odense SØ Denmark +45 53 53 57 37

declares that this product:

Type: Industrial Robot Gripper Model: RG2 Serial number: 1000000000 - 1009999999

is partly completed machinery according to 2006/42/EC. The product must not be put into service before the complete machine is in full compliance with all essential requirements of 2006/42/EC. A comprehensive risk assessment must be carried out for each application as part of ensuring that all essential requirements are fulfilled. All essential requirements must be assessed. Instructions and guidance provided in the RG2 user manual must be followed.

Technical documentation compiled according to 2006/42/EC annex VII part B is available to national authorities upon request.

The product is in conformity with, and CE marked according to, the following directives:

2014/30/EU — Electromagnetic Compatibility Directive (EMC)
 2011/65/EU — Restriction of the use of certain hazardous substances (RoHS)
 2014/35/EU — Low Voltage Directive (LVD)

Niels Degn CTO Odense, January 2<sup>nd</sup>, 2019

# 5.4 Editions

Edition	Comment
Edition 2	Document restructured.
	List of Acronyms added.
	Appendix added.
	Target Audience added.
	Typographic Conventions added.